

**2008**

**CTS**



**CUSTOMER CONVENIENCE/PERSONALIZATION GUIDE**

# C T S

## TABLE OF CONTENTS

### DRIVER INFORMATION

Instrument Panel . . . . .	1
Instrument Panel Cluster . . . . .	2
Driver Information Center . . . . .	3
DVD Navigation System Controls . . . . .	4

### SAFETY & SECURITY

Keyless Access System . . . . .	5
---------------------------------	---

### COMFORT/CONVENIENCE

Daytime Running Lamps . . . . .	6
Rainsense™ Windshield Wipers . . . . .	6
Heated Windshield Washer Fluid . . . . .	7
Power Window Controls . . . . .	7
Universal Home Remote . . . . .	7
Sunroof . . . . .	8
Ultrasonic Rear Parking Assist . . . . .	8
Setting The Clock . . . . .	8
Trunk Lock Release . . . . .	9

Accessory Power Outlet(s) . . . . .	9
Dual Climate Control System . . . . .	9

### SEATS & MIRRORS

Passenger Air Bag Status Indicator . . . . .	10
Power Seat Adjustment . . . . .	10
Heated and Ventilated Seats . . . . .	10
Automatic Dimming Rearview Mirror . . . . .	11
Power Outside Rearview Mirrors . . . . .	11
Memory Seat and Mirrors . . . . .	11
Curb View Assist Mirror . . . . .	12

### AUDIO/PERSONALIZATION/ COMMUNICATION

Audio Systems . . . . .	12
Hard Disk Drive (HDD) . . . . .	13

XM™ Satellite Radio . . . . .	14
Six-Disc CD Changer Controls . . . . .	14
OnStar® . . . . .	15


### POWERTRAIN & MAINTENANCE

Engine . . . . .	15
Transmission . . . . .	16
Traction & Stability . . . . .	16

### OWNER PRIVILEGES™

Roadside Service . . . . .	17
Customer Assistance . . . . .	17
Cadillac Online . . . . .	17

## Driver Information

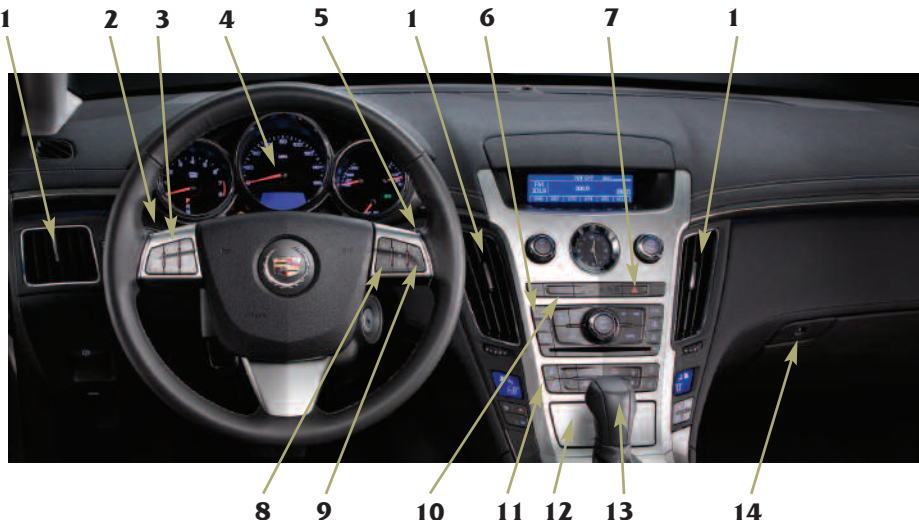

### INSTRUMENT PANEL

- |   |  |  |
|---|--|--|
| <ul style="list-style-type: none"> <li>1. Air Outlets</li> <li>2. Turn Signal/Multifunction Lever</li> <li>3. Cruise Control Buttons</li> <li>4. Instrument Panel Cluster</li> <li>5. Windshield Wiper Lever</li> <li>6. Audio System or Navigation/Audio System (if equipped)</li> </ul> | <ul style="list-style-type: none"> <li>7. Hazard Warning Flasher Button</li> <li>8. Audio Steering Wheel Controls and Source Button</li> <li>9. Audio Mute Button (Base Radio) or Voice Recognition Button (Navigation System)</li> <li>10. Traction Control Button</li> <li>11. Climate Controls</li> </ul> | <ul style="list-style-type: none"> <li>12. Lighter or Accessory Power Outlet</li> <li>13. Transmission Shift Lever</li> <li>14. Glove Box</li> </ul> |
|---|--|--|

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver Information

Safety & Security

Comfort/Convenience


Seats & Mirrors

Audio/Personalization/Communication

Powertrain & Maintenance

Owner Privileges™

# C T S

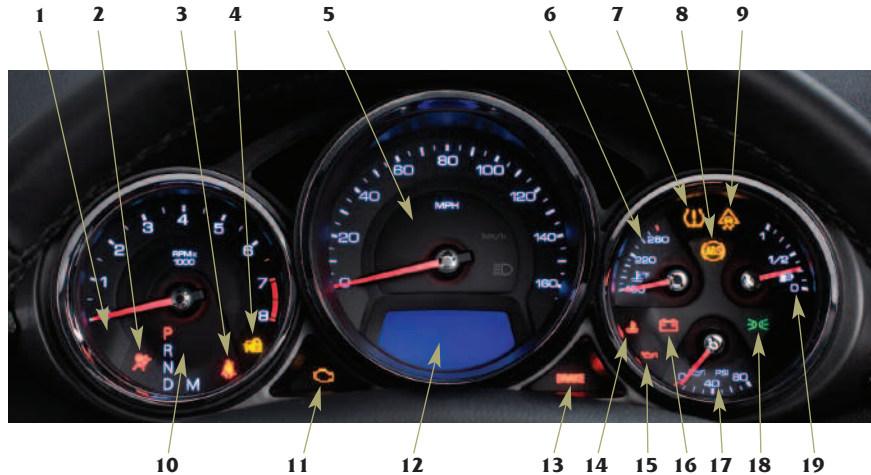

## INSTRUMENT PANEL CLUSTER


- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>1. Tachometer</li> <li>2. Air Bag Readiness Light</li> <li>3. Safety Belt Reminder Light</li> <li>4. Security Light</li> <li>5. Speedometer/Odometer</li> <li>6. Engine Coolant Temperature Gauge</li> <li>7. Tire Pressure Light</li> <li>8. ABS System Warning Light</li> <li>9. Traction Control Warning Light</li> <li>10. Driver Shift Control Display</li> </ul> | <ul style="list-style-type: none"> <li>11. Malfunction Indicator (Check Engine) Lamp</li> <li>12. Driver Information Center</li> <li>13. Brake System Warning Light</li> <li>14. Engine Coolant Temperature Warning Light</li> <li>15. Oil Pressure Light</li> <li>16. Charging System Light</li> <li>17. Engine Oil Pressure Gauge</li> <li>18. Lights On Reminder</li> <li>19. Fuel Gauge</li> </ul> |
|---|--|

**Note:** The instrument cluster is designed to let you know about many important aspects of your vehicle's operation. Some of the gages and indicators may differ from the illustration presented.





The message center can provide critical information to prevent damage to your vehicle. It is important for you to read your Owner Manual and become familiar with the information that is being relayed to you by the lights, gages and indicators, particularly the message center, as well as what action can be taken to ensure your safety and to prevent damage.


## DRIVER INFORMATION CENTER

Your vehicle's Driver Information Center (DIC) provides vehicle information, vehicle feature customization and vehicle warning messages. The DIC messages will be shown on your instrument cluster display. The DIC buttons are located on the left side of the instrument panel. To operate the DIC, the ignition switch must be in the Run position.

 **(Customization):** Press this button to scroll through the customization settings.

### To customize features:

1. Place the vehicle in Park (P).
2. Press the  (Customization) button to enter the feature settings menu. Repeated presses scroll through the available features.
3. Press the  (Set/Reset) button to access the settings for the feature being displayed.
4. Press the  (Menu Up/Down) button to scroll through the available settings for each feature.
5. Press the  (Set/Reset) button to choose the setting being displayed and move to the next feature.

 **(Trip/Fuel):** Press this button to scroll through the following trip and fuel information:


- Odometer
- Trip A or Trip B
- Fuel Range (until empty)
- Average Fuel Economy
- Timer
- Instantaneous Fuel Economy
- Average Speed
- Speedometer


 **(Vehicle Information):**

Press this button to scroll through the following vehicle information:

- Oil Life Remaining
- Units (English/Metric)
- Parking Assist
- Tire Pressure
- Battery Voltage
- Calibrate Compass
- Change Compass Zone
- Relearn Remote Key



 **(Menu Up/Down):** Press this button to scroll up or down the menu items.

 **(Set/Reset):** Press and hold this button to reset DIC information while it is displayed or to acknowledge a warning message. This button is also used for Customization; press to select feature settings.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Safety &  
Security

Comfort/  
Convenience

Seats & Mirrors

Audio/  
Personalization/  
Communication

Powertrain &  
Maintenance

Owner  
Privileges™

# C T S

## Warnings and Messages

If a problem is sensed in one of your vehicle's systems, a warning or message will appear on the DIC display.

**Note:** Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

## Check Engine or other Warning Lights with OnStar® (if equipped)

If your check engine light or any other warning message appears, you can press the blue OnStar button and speak to a live advisor. OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is, what you should do about it, or can contact a dealer or Roadside service for you. Refer to the OnStar Owner Guide for details.

## NAVIGATION SYSTEM CONTROLS

If your CTS has the optional Navigation/Audio system, use the following controls to access the vehicle status menu.

- 1. TUNE/SELECT:** Turn the lower right knob to scroll through the menu. Press the knob to select a menu item.
- 2.** Press the bulleted button (•) on the right side of the display to select a menu item or to acknowledge a prompt.

See your Navigation manual for additional operating instructions.



## Safety & Security



### KEYLESS ACCESS SYSTEM (if equipped)

With a Keyless Access System, you can keep the Keyless Access transmitter in a pocket or purse and operate the doors, ignition and trunk. The transmitter communicates with the vehicle's computer system via radio antennas.

Refer to Owner Manual for further information.

**🔒 (Lock):** Press this button once to lock all the doors. Press twice to also flash the turn signals twice and sound the horn once.

**🔓 (Unlock):** Press this button to unlock the driver's door. Press it again within 5 seconds to unlock all remaining doors.

**🔄 (Remote Start):** This feature can be used to start the engine from outside the vehicle.

#### To remote start the vehicle:

1. Aim the transmitter at the vehicle.
2. Press and release the Lock button on the transmitter.
3. Immediately press and hold the Remote Start button for about four seconds. When the parking lamps flash, release the button. The engine will start and the parking lamps will remain on. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Only two consecutive remote starts are allowed.

When you enter the vehicle after a remote start, apply the brake and push and turn the ignition knob to the Run position before driving.

**🚗 (Remote Trunk Release):** Press this button to release the trunk lid when the engine is off or the shift lever is in Park (P).

The trunk may also be opened using the Trunk Release button located at the rear of the driver's door map pocket.

**📶 (Vehicle Locator/Panic Alarm):** Press this button to locate your vehicle in a parking lot. The horn will chirp three times and the headlamps and turn signal lamps will flash three times.

To sound the panic alarm, press and hold the button for three seconds. The horn will chirp and the turn signal lamps will flash for 30 seconds. Press the button again to cancel the panic alarm. The vehicle must be turned off to use the alarm.

Reviewed with Customer (Please Check Box)

# C T S

## Comfort/Convenience

### DAYTIME RUNNING LAMPS (DRL)

Your vehicle's Daytime Running Lamps (DRL) automatically illuminate. The sensor that activates the DRL and the headlights automatically is located on top of the instrument panel. Avoid covering the sensor to ensure proper light operation.

### RAINSENSE™ WINDSHIELD WIPERS

The Rainsense windshield wipers use a sensor to automatically operate the wipers when needed, depending on driving conditions and the sensitivity setting. If the system is left on for long periods, an occasional wipe may occur without any moisture on the windshield to indicate the system is activated.





The headlamps also will be turned on automatically when the Rainsense

wipers are active if the exterior lamp control switch is in the AUTO position.

**Note:** Do not place stickers or other items on the exterior glass surface directly in front of the moisture sensor. Doing this could cause the moisture sensor to malfunction.

### WIPER CONTROLS

The lever to operate the windshield wipers and washers is located on the right side of the steering column.

-  **(Mist):** Pull the lever down and release for a single wiping cycle; hold the lever down for more cycles.
-  **(Off):** Place the lever in this position to turn off the wipers.
-  **(Delay):** Place the lever in this position to set a delay between wipes.
-  **(Delay Adjustment):** Rotate the band on the lever to adjust the length of the delay between wipes. The closer you move the band toward Mist, the longer the delay.

**1 (Low Speed):** Place the lever in this position for slow, steady wiping cycles.

**2 (High Speed):** Place the lever in this position for rapid wiping cycles.






**Washers:** Press the button located on the end of the wiper lever to cycle the windshield washer.


### Headlamp Washers (if equipped)

The headlamp washers are activated when the windshield washer is activated. This occurs only when the headlamps are on. To wash the headlamps, press the washer button located at the end of the windshield wiper lever.

### HEATED WINDSHIELD WASHER FLUID (if equipped)

The heated windshield washer fluid system can help clear ice, tree sap and bugs from the windshield.

Press the  (Heated Washer Fluid) button, located on the climate control system panel, to start four automatic heated wash/wipe/pause cycles. The washer fluid may take up to 40 seconds to heat before the first cleaning cycle. The remaining cleaning cycles may take about 20 seconds to occur.

To cancel any remaining cycles, press the  button again.

### POWER WINDOW CONTROLS

#### Express Down

All of your vehicle's windows are equipped with an express-down feature. Press the switch to the second position to activate the express-down feature. Press down again or pull up briefly on the switch to stop the window.

#### Express Up

This feature is on both front power windows. Pull the switch up to the second position to activate the express-up feature. Pull up again or press down on the switch briefly to stop the window.

### TIRE SEALANT AND COMPRESSOR KIT (if equipped)

The Tire Sealant and Compressor kit is located in the trunk. The kit can be used to temporarily fill a flat tire so you can safely drive to a repair facility.

See your Owner Manual for complete operating instructions.

### UNIVERSAL HOME REMOTE

The Universal Home Remote, located on the overhead console, is a combined universal transmitter and receiver that can activate up to three devices, such as garage door openers, entry door locks, gates and security systems.

It's recommended that you read the instructions in your Owner Manual completely before attempting to program any of the three channels on the Universal Home Remote. The engine should be turned off when programming the remote.

**Note:** Do not use the Universal Home Remote with any garage door opener that does not have the "stop and reverse" feature or any opener manufactured before April 1, 1982.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Safety &  
Security

Comfort/  
Convenience

Seats & Mirrors

Audio/  
Personalization/  
Communication

Powertrain &  
Maintenance

Owner  
Privileges™

# C T S

## SUNROOF (if equipped)



The control switch for the sunroof is located on the overhead console. It will operate only while the ignition is on or Retained Accessory Power is active.

**Sunshade:** Press and hold the front of the switch (1) to open the sunshade; or the rear of the switch (1) to close the sunshade.

The sunshade will express open if you briefly press the button and release

**Sunroof:** Press and hold the front of the switch (2) to vent the sunroof. From the vent position, press and

hold the front of the switch (2) to open the sunroof. Press and hold the rear of the switch (2) to close the sunroof from either position.

The sunroof will express open if you briefly press the button and release.

## ULTRASONIC REAR PARKING ASSIST

This feature uses ultrasonic sensors on the rear bumpers to help you avoid colliding with objects when parking the vehicle. It operates only at speeds less than 5 mph (8 km/h).

The rear parking assist display is located near the rear window and provides the following indicators:

- At distances between 40 inches (1 m) and 8 ft. (2.5 m), a single amber light will come on.
- At distances between 23 inches (0.6 m) and 40 inches (1 m), two amber lights will come on.
- At distances between 12 inches (0.3 m) and 23 inches (0.6 m), three lights (amber/amber/red) will be on.

- At distances less than 12 inches (0.3 m), a beeping sound will repeat for a short time and all three lights (amber/amber/red) will flash.

The system can be disabled through the Driver Information Center (DIC). See your Owner Manual for more information.

## SETTING THE CLOCK

The clock adjustment buttons are located on the instrument panel below the clock face. Press and hold the right button to move the clock hands forward or the left button to move the clock hands backward. Holding the button causes the hands to move quickly. Press and release either button to adjust the time in one minute increments.

## TRUNK LOCK RELEASE

Press the trunk release button, located at the back of the driver's door map pocket, to open the trunk. The shift lever must be in Park (P) or Neutral (N) if your vehicle has an automatic transmission. For manual transmission vehicles, the shift lever must be in Neutral with the parking brake set.

## ACCESSORY POWER OUTLET(S)

Your vehicle has three accessory power outlets that can be used to connect auxiliary electrical equipment. One is located in the front storage area, one is inside the center console storage bin, and one is on the rear of the center console. See your Owner Manual from more information.

## DUAL CLIMATE CONTROL SYSTEM



Your vehicle's climate control system can be operated manually or automatically. With a dual climate control system, both you and your front seat passenger can choose different temperature settings.

**Power:** Press this button to turn the climate control system on or off.

**AUTO (Automatic):** Press this button to automatically control the inside temperature, the air delivery mode and the fan speed.

**PASS (Passenger Climate Control):** Press this button to set a different inside temperature for the passenger.

**Defrost:** Press this button to direct most of the airflow to the windshield

**Fan:** Press the up or down arrow to increase or decrease fan speed.

**Air Conditioning:** Press this button to turn the air conditioning system on or off.

**Recirculation/Outside Air:** Press to select recirculation or outside air modes. An indicator light on the switch will illuminate to show which mode is active.

**Rear Window Defogger:** Press this button to activate the rear window defogger and the heated outside rearview mirrors. The defogger and heated mirrors will shut off automatically or can be turned off by pressing the button again.

**Mode:** Press the up or down arrow to change the direction of the airflow as well as to select the defog mode.

**Temperature Adjustment:** Press the up or down arrow button to increase or decrease the temperature setting.

See your Owner Manual for complete operating instructions.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Safety &  
Security

Comfort/  
Convenience

Seats & Mirrors

Audio/  
Personalization/  
Communication

Powertrain &  
Maintenance

Owner  
Privileges™

# C T S

## Seats & Mirrors

### PASSENGER AIR BAG STATUS INDICATOR

Your vehicle is equipped with a Passenger Sensing System located in the front passenger seat for the front passenger frontal air bag, and a passenger air bag status indicator located below the clock on the instrument panel.

**Note:** It is recommended that children not be placed in the front passenger seat, even with the Passenger Sensing System. All children should be secured in a rear seat, including an infant riding in a rear-facing infant seat, a child riding in a forward-facing child seat and an older child riding in a booster seat.

### POWER SEAT ADJUSTMENT (if equipped)

The eight-way power seat controls are located on the outboard sides of driver and passenger seats (if equipped).

1. Move the front or rear part of the control lever up or down to raise or lower the front or rear of the cushion.
2. Push down or pull up at the center of the control lever to raise or lower the entire seat.
3. Slide the control lever forward or rearward to move the entire seat in that direction.

### Power Recliner (if equipped)

The power recliner controls are located to the rear of the adjustment controls.

4. Move the top of the control lever forward to raise the seatback or rearward to recline the seatback.



### Power Lumbar (if equipped)

The power adjustable lumbar feature is controlled by a two-way switch located rearward of the power seat switch. Press the switch in either direction to adjust the lumbar in the seatback to your most comfortable position.

### HEATED AND VENTILATED SEATS (if equipped)

The buttons for the heated and ventilated front seats are located on the climate control panel. Continue to press and release the desired button to cycle through the temperature settings of high, medium and low.

#### (Heated Seat and Seatback):

Press this button to control the heated seat and seatback.


#### (Ventilated Seat):

Press this button to control the ventilated seat.

The climate control display shows the current setting, or blank if off.

## AUTOMATIC DIMMING REARVIEW MIRROR

The automatic dimming feature becomes active every time the vehicle is started.

 **(On/Off):** Press this button to turn the automatic dimming mirror off or back on while driving. The symbol on the button will illuminate when automatic dimming is active.

## POWER OUTSIDE REARVIEW MIRRORS



The controls for both outside rearview mirrors are located on the driver's side armrest.

1. Press the left or right side of the rocker switch to operate the

desired outside mirror. The neutral position will turn the power operation capability off.

2. Press the directional arrow on the control button to move the mirror in that direction.

The mirrors can be folded manually inward to prevent damage in car washes or garages. Return the mirrors to their normal positions before driving. The mirrors also are heated to clear fog, snow or ice when the rear defogger is on. Refer to the Comfort/Convenience section of this guide.


## MEMORY SEAT AND MIRRORS

 
### Setting Driver's Position

The buttons to set the seat and mirror memory are on the driver's doors. Adjust the driver's seat, including the seatback recliner and both outside mirrors.

1. Press and hold button 1 until two beeps are heard to confirm memory setting.
2. Repeat the procedure using button 2 to store memory for a second driver.

### Setting Exit Position

1. Press button 1 or the Unlock button on the keyless entry transmitter with number 1 on the back.
2. Adjust the driver's seat to the desired exit position.
3. Press and hold the exit button  until two beeps are heard to confirm exit memory setting. Repeat the procedure for a second driver using button 2 or the Unlock symbol on the keyless entry transmitter with 2 on the back.

To recall stored exit positions, press and release the exit button . A beep will sound and the seat will move to the memory exit position for the identified driver. If no exit position is stored, the seat will move all the way back.



Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Safety &  
Security

Comfort/  
Convenience

Seats & Mirrors

Audio/  
Personalization/  
Communication

Powertrain &  
Maintenance

Owner  
Privileges™

# C T S

Vehicles with automatic transmissions must be in Park (P) to recall exit positions. For manual transmissions, the parking brake must be set if the engine is running.

## CURB VIEW ASSIST MIRROR

 
When activated through the Driver Information Center (DIC), the mirrors will tilt to a pre-selected position when the vehicle is shifted into Reverse (R) to assist the driver when parallel parking. If further adjustment is needed, the standard power controls can be used. Five seconds after shifting out of Reverse (R), the mirror will return to its original position. The Curb View Assist feature can be enabled/disabled through the DIC.

## AUDIO SYSTEMS

While most of the features on your radio will look familiar, following are some that may be new.

## Audio/Personalization/Communication



**VOL**  (**Volume/Power**): Press this knob to turn the system on or off. Turn the knob to adjust the volume.

**TUNE/TONE**: Turn this knob to select radio stations. Press the knob to adjust the speaker tone and balance.

**AUDIO**: Press this button to access the audio modes. To choose a mode, use the touch screen or continually press the AUDIO button to toggle through the available modes.

**AM**: Select to access AM frequency.

**FM**: Select to access FM frequency.

**XM™ (if equipped)**: Select to access XM™ satellite radio

**CD**: Select to play a CD, an MP3 player or Hard Drive Device (HDD)(if equipped) instead of the radio.

**HDD**: Select to access the Hard Drive Device feature.

**AUX**: Select to automatically search for a device connected to the auxiliary input jack.

## Optional Hard Drive Device (HDD) and Navigation Radio Features

**REC (Record):** Press this button to store a song from a media source to the HDD.

**CONFIG:** Press this button to display the system configuration menu.

**MENU/SELECT:** Turn this knob to scroll through a list of available radio stations and functions. Press the knob to select a station or menu option.

**DEL:** Press this button to erase selections from the HDD menu/memory.

**INFO (Information):** Press this button to access "Speech Rec Help". If equipped with XM, this button will access "Weather" information.

**FAV (Favorites):** Press this button to go through up to six pages of any combination (AM, FM or XM, if equipped) of preset radio stations. On each page, up to six stations are available by using the six pushbuttons below the radio display or on the Navigation touch screen.

**◀ SEEK ▶:** While listening to AM, FM, or XM, press the left or right

arrow button to go to the previous or next radio station. When a CD or HDD selection is playing, press the left or right arrows to go to the start of the current track or MP3 file or the next track or MP3 file.

**▲ (Eject):** Press this button once to eject the currently playing CD or DVD (if equipped); or, if equipped with the multiple-disc CD player, press and hold this button to eject all CDs. If a CD is not removed after several seconds, it will be pulled back into the player automatically.

**▶/|| (Play/Pause):** Press this button to play a media source or to pause a currently playing media source. Use this button to initiate time shift mode which allows you to play back AM, FM or XM content for the previous 60 minutes. This feature will continue to work even if the ignition is turned off.

**▶▶ FWD/◀◀ REV (Forward/Reverse):** Press and hold the right or left arrow button to advance or reverse through a CD or MP3 track. These buttons are also used to move through time shift audio.

## Hard Drive Device (HDD) (if equipped)

Radios with a Hard Drive Device (HDD) can store songs from a CD or media storage device to your audio system. A USB port is located in the center console storage bin, between the Accessory Power Outlet and the auxiliary input jack.

### To access the HDD:

1. Press the AUDIO button then select the HDD tab or press the AUDIO button multiple times to toggle to this source.
2. Turn the Menu/Select knob to select an option from the HDD menu.
3. Press the Menu/Select knob to go to the next menu.

Press the REC button to store a song or songs for the selected source.

See your Owner Manual for more detailed information about this feature.

Refer to Owner Manual for further information.

Reviewed with Customer (Please Check Box)

Driver  
Information

Safety &  
Security

Comfort/  
Convenience

Seats & Mirrors

Audio/  
Personalization/  
Communication

Powertrain &  
Maintenance

Owner  
Privileges™

# CTS

## Setting Favorite Stations

### To store favorite stations:

1. Tune to the desired station.
2. Press the FAV button to display the page where the station is to be stored.
3. Press and hold one of the six pushbuttons or Navigation touch screen until a beep sounds.
4. Repeat the steps for each pushbutton on each page. You can select up to six pages for which there are six favorites per page.

### To set the number of favorite station pages:

1. Press the CONFIG button to display the radio setup menu.
2. Select the RADIO tab.
3. Select the number of preset pages you want.

**Note:** Choosing to engage in extended searching for specific audio stations or songs by using buttons and knobs — or to give extended attention to entertainment tasks — can lead you to look away from the road frequently or longer than usual. Looking away from the road for prolonged periods may cause you to miss seeing things on the road that you need to see. Be sure to keep your eyes on the road and mind on the drive — and avoid engaging in extended searching for specific items while driving.

## XM™ SATELLITE RADIO

XM Satellite Radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast. XM can display song title, artist or entertainment genre by pressing the INFO (Information) button.

After a free trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada.

For more information, visit XM online at [www.XMradio.com](http://www.XMradio.com) or call 1-800-XXMX (9696).

## SIX-DISC CD CHANGER CONTROLS

### Loading One Disc:

With the ignition on or off, do the following:

1. Press and release the Load button and wait for the message to insert the disc.
2. Load the disc. Insert a disc partway into the slot, label side up. The player will pull the disc in.

### Loading Multiple Discs:

With the ignition on or off, do the following:

1. Press and hold the Load button for five seconds. A beep will be heard and Load All Discs will appear on the display.

**Note:** If you add any label to a CD, insert more than one CD into the slot at a time, or attempt to play scratched or damaged CDs, you could damage the CD player. When using the CD player, use only CDs in good condition without any label, load one CD at a time, and keep the CD player and the loading slot free of foreign materials, liquids and debris.



- Follow the displayed instructions and load a disc partway into the slot, label side up. The player will pull it in.
- To cancel loading CDs, press the load button again.

If the radio is on, the last disc loaded will begin to play automatically.

### ONSTAR® (if equipped)

You have one year of OnStar service from the date you purchased your new vehicle. All Cadillacs come with the up-level Directions & Connections Plan. Your vehicle has a wide variety of capabilities, from Remote Door Unlock to Automatic Airbag Notification to Hands-Free Calling. And you can get driving directions using OnStar Turn-by-Turn Navigation. Live Advisors are available 24 hours a day 7 days a week and can provide you with many of the services listed below.

- Turn-by-Turn Navigation
- OnStar Vehicle Diagnostic email
- Automatic Airbag Notification

- Automatic Advanced Crash Notification
- Emergency Services
- Remote Door Unlock
- Cadillac “Did you know” ask vehicle questions
- Stolen Vehicle Location Assistance
- Hands-Free Calling with 30 calling minutes
- Roadside Assistance
- Fuel Station Location
- Information & Connections services
- Virtual Advisor, GPS based Traffic & Weather
- Fuel Station Location

For Remote Door Unlock or Stolen Vehicle Location Assistance call 1.888 4ONSTAR (1.888.466.7827). Visit [onstar.com](http://onstar.com) or [onstar.ca](http://onstar.ca). For more information about OnStar refer to the OnStar Owner Guide.

**See Section 2 of your Owner Manual.**

Refer to Owner Manual for further information.

## Powertrain & Maintenance

### ENGINE

#### Fuel

Your CTS is equipped with an 18-gallon (68.1 L) fuel tank. When your vehicle gets low on fuel, the Fuel Level Low message displays in the Driver Information Center.

The fuel door is located on the passenger side of the vehicle and can be opened by pressing the rear edge of the door with your fingers.

#### Coolant Heater (if equipped)

The engine coolant heater can make starting the engine easier at temperatures below 0°F (-18°C).

For best results, the coolant heater should be plugged in at least four hours before starting your vehicle.

**Note:** The grade of gasoline you use can affect the performance of your vehicle and may even cause damage. Please refer to your Owner Manual for complete information regarding suggested octane ratings for optimum performance.

Reviewed with Customer (Please Check Box)

Driver  
Information

Safety &  
Security

Comfort/  
Convenience

Seats & Mirrors

Audio/  
Personalization/  
Communication

Powertrain &  
Maintenance

Owner  
Privileges™

# C T S

## TRANSMISSION

### Automatic Overdrive

Automatic Overdrive is best used for normal driving. To activate passing gear when going less than 35 mph (56 km/h), push the accelerator about halfway down; when doing more than 35 mph (56 km/h), push the accelerator all the way down. For further information regarding gear selection for various driving conditions, refer to your Owner Manual.

### Driver Shift Control (automatic transmission only)

The Driver Shift Control (DSC) mode allows you to change gears similar to a manual transmission. To use the DSC mode:

1. Slide the gearshift lever from Drive (D) to the right to Manual Mode (M).
2. Press the gearshift lever forward to upshift or rearward to downshift.

Activation of the DSC mode is indicated in the DIC. The display above the (M) in the cluster will change to a number indicating the requested gear range.

When in DSC mode, if you do not move the gearshift lever forward or rearward to shift, the transmission will be in sport mode and will still shift automatically.

The transmission will only allow shifting into gears appropriate for the vehicle speed and engine rpm. The transmission will not automatically shift to the next higher gear if the rpm is too high.



## TRACTION & STABILITY

### Traction Control System

The Traction Control System is enabled every time you start your vehicle. When one or more of the drive wheels begin to spin from traction loss, the Traction Control System will apply braking to the spinning wheel(s) and may reduce engine power until traction is regained.

If your vehicle becomes stuck, and rocking the vehicle is required, the system should be turned off.

Press the button located on the instrument panel to turn the system off or back on.

### StabiliTrak® – Stability Control System

StabiliTrak® is an advanced computer-controlled system that assists with directional control of the vehicle during sudden maneuvers or low-traction situations. It is normal to hear the system working, and the system will automatically disengage cruise control when activated.

## Owner Privileges™

To make your ownership experience as satisfying and rewarding as possible, we are proud to provide you with Cadillac's exceptional Owner Privileges, designed to accommodate you anytime and anywhere.

### ROADSIDE SERVICE 1-800-882-1112

Roadside Service provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services:

- Towing Service
- Battery Jump-Starting
- Lockout Assistance
- Fuel Delivery
- Flat Tire Assistance  
(covers change only)

### Roadside Assistance and OnStar® (if equipped)

Push the OnStar button, the vehicle will send your GPS location to the OnStar Advisor who will speak to you, assess your problem, contact

Refer to Owner Manual for further information.

Roadside Assistance and relay your exact location so you get the help you need.

**Trip Interruption:** If your trip is interrupted due to a component failure covered under warranty, incidental expenses may be reimbursed, including hotel, meals and rental car.

**Courtesy Transportation** may also be provided for warranted repairs, including shuttle service for same-day repairs and loaner transportation for overnight repair. Roadside Service is also available to Cadillac customers beyond the warranty period for a charge.

### CUSTOMER ASSISTANCE 1-800-458-8006

In Canada, call 1-888-446-2000.

Should you need to ask a question, make a comment, or request additional information, the exclusive Cadillac Customer Assistance Center is staffed around the clock with professionals to serve you.

When you call Cadillac Roadside Service or Customer Assistance,

when possible, please provide the phone advisor with:

- Your telephone number
- Your location
- Your Cadillac's location
- A description of the problem
- Vehicle Identification Number
- Year and model of your Cadillac
- Delivery date
- Current mileage

### CADILLAC ONLINE

For more information about your Cadillac, including access to the Cadillac Owner Center at My GMLink, visit [www.cadillac.com](http://www.cadillac.com).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice.

CTS is a registered trademark of Cadillac Motor Car Division and General Motors Corporation. Copyright 2007 by Cadillac Motor Car Division. All rights reserved.

Reviewed with Customer (Please Check Box)

Driver  
Information

Safety &  
Security

Comfort/  
Convenience

Seats & Mirrors

Audio/  
Personalization/  
Communication

Powertrain &  
Maintenance

Owner  
Privileges™

*Cadillac*



\* 1 5 8 6 4 5 6 6 A \*