

2009

CTS




CUSTOMER CONVENIENCE/PERSONALIZATION GUIDE

TABLE OF CONTENTS

DRIVER INFORMATION	Ultrasonic Rear Parking Assist8	AUDIO/PERSONALIZATION/ COMMUNICATION
Instrument Panel1	Setting The Clock8	Audio Systems12
Instrument Panel Cluster2	Trunk Lock Release8	Hard Drive Device (HDD)13
Driver Information Center3	Accessory Power Outlet(s)8	XM Satellite Radio14
Navigation System4	Dual Climate Control System8	Six-Disc CD Changer Controls . .14
SAFETY & SECURITY	SEATS & MIRRORS	OnStar®14
Keyless Access System4	Passenger Air Bag Status Indicator9	Bluetooth® System15
COMFORT/CONVENIENCE	Power Seat Adjustment9	POWERTRAIN & MAINTENANCE
Daytime Running Lamps5	Heated and Ventilated Seats . . .10	Engine15
Rainsense™ Windshield Wipers . .5	Automatic Dimming Rearview Mirror10	Transmission15
Wiper Controls6	Power Outside Rearview Mirrors10	Traction & Stability16
Heated Windshield Washer Fluid .6	Memory Seat, Mirrors and Steering Wheel11	OWNER PRIVILEGES™
Power Window Controls7	Park Tilt Mirrors11	Roadside Service17
Tire Sealant and Compressor Kit .7		Customer Assistance17
Universal Home Remote7		Cadillac Online17
Sunroof7		

Driver Information

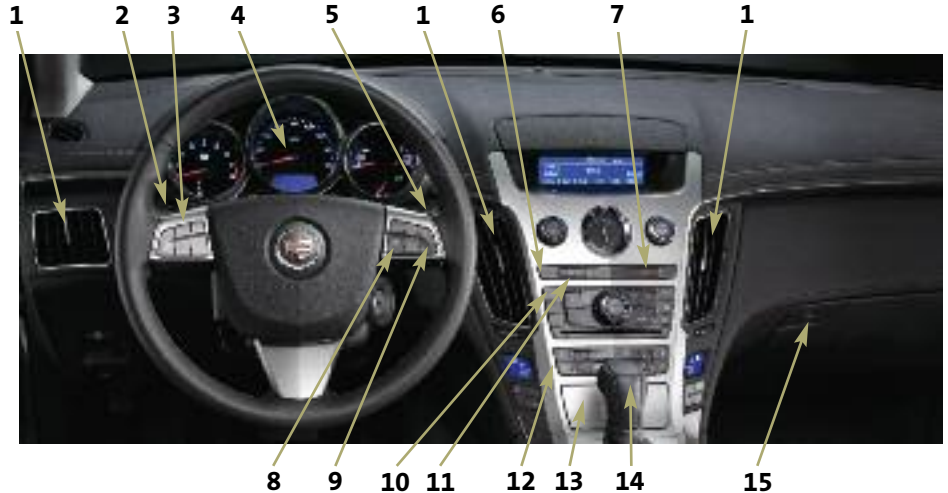

INSTRUMENT PANEL

- | | | |
|--|---|---|
| 1. Air Outlets | 7. Hazard Warning Flasher Button | 10. Audio System or Navigation/
Audio System (if equipped) |
| 2. Turn Signal/Multifunction Lever | 8. Audio Steering Wheel Controls,
Source Button and Bluetooth®
for Phone Controls | 11. Traction Control Button |
| 3. Traction Control/Stabilitrak®
Modes (CTS-V only) | 9. Audio Mute Button (Base Radio)
or Voice Recognition Button
(Navigation System) | 12. Climate Controls |
| 4. Instrument Panel Cluster | | 13. Lighter or Accessory
Power Outlet |
| 5. Windshield Wiper Lever | | 14. Transmission Shift Lever |
| 6. MR Suspension Mode
Switch (CTS-V only) | | 15. Glove Box |

Refer to Owner Manual for further information.

○ Reviewed with Customer (Please Check Box)



INSTRUMENT PANEL CLUSTER


- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Tachometer 2. Air Bag Readiness Light 3. Safety Belt Reminder Light 4. Security Light 5. Speedometer/Odometer 6. Engine Coolant Temperature Gauge 7. Tire Pressure Light 8. ABS System Warning Light 9. Traction Control Warning Light 10. Driver Shift Control Display 11. Malfunction Indicator (Check Engine) Light | <ol style="list-style-type: none"> 12. Driver Information Center 13. Brake System Warning Light 14. Engine Coolant Temperature Warning Light 15. Oil Pressure Light 16. Charging System Light 17. Engine Oil Pressure Gauge, Boost Gauge (CTS-V only) 18. Lights On Reminder 19. Fuel Gage |
|---|--|

Note: The instrument cluster is designed to let you know about many important aspects of your vehicle's operation. Some of the gages and indicators may differ from the illustration presented.


 


The message center can provide critical information to prevent damage to your vehicle. It is important for you to read your Owner Manual and become familiar with the information that is being relayed to you by the lights, gages and indicators, particularly the message center, as well as what action can be taken to ensure your safety and to prevent damage.

DRIVER INFORMATION CENTER


Your vehicle's Driver Information Center (DIC) provides vehicle information, vehicle feature customization and vehicle warning messages. The DIC messages will be shown on your instrument cluster display. The DIC buttons are located on the left side of the instrument panel. To operate the DIC, the ignition switch must be in the Run position.

 **(Customization):** Press this button to scroll through the customization settings.

To customize features:


1. Place the vehicle in Park (P).
2. Press the  (Customization) button to enter the feature settings menu. Repeated presses scroll through the available features.
3. Press the  (Set/Reset) button to access the settings for the feature being displayed.
4. Press the  (Menu Up/Down) button to scroll through the available settings for each feature.
5. Press the  (Set/Reset) button to choose the setting being displayed and move to the next feature.

Refer to Owner Manual for further information.

 **(Trip/Fuel):** Press this button to scroll through the following trip and fuel information:

- Odometer
- Trip A or Trip B
- Fuel Range (until empty)
- Average Fuel Economy
- Timer
- Instantaneous Fuel Economy
- Average Speed
- Speedometer




 **(Menu Up/Down):** Press this button to scroll up or down the menu items.

 **(Vehicle Information):**

Press this button to scroll through the following vehicle information:

- Oil Life Remaining
- Units (English/Metric)
- Parking Assist
- Tire Pressure
- Battery Voltage
- Calibrate Compass
- Change Compass Zone
- Relearn Remote Key

 **(Set/Reset):** Press and hold this button to reset DIC information while it is displayed or to acknowledge a warning message. This button is also used for Customization; press to select feature settings.

o Reviewed with Customer (Please Check Box)

Warnings and Messages

If a problem is sensed in one of your vehicle's systems, a warning or message will appear on the DIC display.

Note: Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

Check Engine or other Warning Lights with OnStar® (if equipped)

If your check engine light or any other warning message appears, you can press the blue OnStar button and speak to a live advisor. OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is, what you should do about it, or can contact a dealer or Roadside service for you. Refer to the OnStar Owner's Guide for details.

NAVIGATION SYSTEM

Your vehicle's Navigation System provides you with detailed maps of all major highways and roads throughout the United States. After you enter a destination, the system provides turn-by-turn instructions for reaching your destination. In addition, the system can help you locate banks, airports, restaurants and more.

See your Navigation manual for additional operating instructions.





Safety & Security




KEYLESS ACCESS SYSTEM (if equipped)

With a Keyless Access System, you can keep the Keyless Access transmitter in a pocket or purse and operate the doors, ignition and trunk. The transmitter communicates with the vehicle's computer system via radio antennas.

 **(Lock):** Press this button once to lock all the doors. Press twice to also flash the turn signals twice and sound the horn once.


 **(Unlock):** Press this button to unlock the driver's door. Press it again within five seconds to unlock all remaining doors.


 **(Remote Start):** This feature can be used to start the engine from outside the vehicle.

To remote start the vehicle:

1. Aim the transmitter at the vehicle.
2. Press and release the lock button on the transmitter.
3. Immediately press and hold the remote start button for about four seconds. When the parking lamps flash, release the button. The engine will start and the parking lamps will remain on. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Only

two consecutive remote starts are allowed. When you enter the vehicle after a remote start, apply the brake and push and turn the ignition knob to the Run position before driving.

 **(Trunk):** Press and hold this button for about one second to release the trunk lid when the engine is off or the shift lever is in Park (P). The trunk may also be opened using the trunk release button located at the rear of the driver's door map pocket.

 **(Vehicle Locator/Panic Alarm):** Press and release this button to locate your vehicle in a parking lot. The horn will chirp three times and the headlamps and turn signal lamps will flash three times. To sound the panic alarm, press and hold the button for three seconds. The horn will chirp and the turn signal lamps will flash for 30 seconds. Press the button again to cancel the panic alarm. The vehicle must be turned off to use the alarm.

Comfort/Convenience

DAYTIME RUNNING LAMPS (DRL)

Your vehicle's Daytime Running Lamps (DRL) automatically illuminate. The sensor that activates the DRL and the headlights automatically is located on top of the instrument panel. Avoid covering the sensor to ensure proper light operation.

RAINSENSE™ WINDSHIELD WIPERS

The Rainsense windshield wipers use a sensor to automatically operate the wipers when needed, depending on driving conditions and the sensitivity setting. If the system is left on for long periods, an occasional wipe may occur without any moisture on the windshield to indicate the system is activated. The headlamps also will be turned on automatically when the Rainsense wipers are active if the exterior lamp control switch is in the AUTO position.

o Reviewed with Customer (Please Check Box)

Refer to Owner Manual for further information.

Note: Do not place stickers or other items on the exterior glass surface directly in front of the moisture sensor. Doing this could cause the moisture sensor to malfunction.

WIPER CONTROLS

The lever to operate the windshield wipers and washers is located on the right side of the steering column.

☒ (Mist): Pull the lever down and release for a single wiping cycle; hold the lever down for more cycles.

○ (Off): Place the lever in this position to turn off the wipers.

☒ (Delay): Place the lever in this position to set a delay between wipes.

◀☒ (Delay Adjustment): Rotate the band on the lever to adjust the length of the delay between wipes. The closer you move the band toward Mist, the longer the delay.



1. **(Low Speed):** Place the lever in this position for slow, steady wiping cycles.

2. **(High Speed):** Place the lever in this position for rapid wiping cycles.

Washers: Press the button located on the end of the wiper lever to cycle the windshield washer.

Headlamp Washers (if equipped)

The headlamp washers are activated when the windshield washer is activated. This occurs only

when the headlamps are on. To wash the headlamps, press the washer button located at the end of the windshield wiper lever.

HEATED WINDSHIELD WASHER FLUID (if equipped)

The heated windshield washer fluid system can help clear ice, tree sap and bugs from the windshield.

Press the ☒ (Heated Washer Fluid) button, located on the climate control system panel, to start four automatic heated wash/wipe/pause cycles. The washer fluid may take up to 40 seconds to heat before the first cleaning cycle. The remaining cleaning cycles may take about 20 seconds to occur.

To cancel any remaining cycles, press the ☒ button again.

POWER WINDOW CONTROLS

Express Down

All of your vehicle's windows are equipped with an express-down feature. Press the switch to the second position to activate the express-down feature. Pull up briefly on the switch to stop the window.

Express Up

This feature is on both front power windows. Pull the switch up to the second position to activate the express-up feature. Pull up again or press down on the switch briefly to stop the window.

TIRE SEALANT AND COMPRESSOR KIT

The Tire Sealant and Compressor kit is located in the trunk. The kit can be used to temporarily fill a flat tire so you can safely drive to a repair facility.

See your Owner Manual for complete operating instructions.

Refer to Owner Manual for further information.

UNIVERSAL HOME REMOTE

The Universal Home Remote, located on the overhead console, is a combined universal transmitter and receiver that can activate up to three devices, such as garage door openers, entry door locks, gates and security systems. It's recommended that you read the instructions in your Owner Manual completely before attempting to program any of the three channels on the Universal Home Remote. The engine should be turned off when programming the remote.

Note: Do not use the Universal Home Remote with any garage door opener that does not have the "stop and reverse" feature or any opener manufactured before April 1, 1982.

SUNROOF (if equipped)

The control switch for the sunroof is located on the overhead console. It will operate only while the ignition



is on or Retained Accessory Power is active.

Sunshade: Press and hold the rear of the switch (1) to open the sunshade; or the front of the switch (1) to close the sunshade.

Sunroof: Press and hold the front of the switch (2) to vent the sunroof. Press and hold the rear of the switch (2) to close the vented sunroof. Press the rear of the switch (2) to open the sunroof. Press and release the front of the switch (2) to close the sunroof.

o Reviewed with Customer (Please Check Box)

ULTRASONIC REAR PARKING ASSIST

This feature uses ultrasonic sensors on the rear bumpers to help you avoid colliding with objects when parking the vehicle. It operates only at speeds less than 5 mph (8 km/h).

The rear parking assist display is located near the rear window and provides the following indicators:

- At distances between 40 inches (1 m) and 8 feet (2.5 m), a single amber light will come on.
- At distances between 23 inches (0.6 m) and 40 inches (1 m), two amber lights will come on.
- At distances between 12 inches (0.3 m) and 23 inches (0.6 m), three lights (amber/amber/red) will be on.
- At distances less than 12 inches (0.3 m), a beeping sound will repeat for a short time and all

three lights (amber/amber/red) will flash.

The system can be disabled through the Driver Information Center (DIC). See your Owner Manual for more information.

SETTING THE CLOCK

The clock adjustment buttons are located on the instrument panel below the clock face. Press and hold the right button to move the clock hands forward or the left button to move the clock hands backward. Holding the button causes the hands to move quickly. Press and release either button to adjust the time in one minute increments.

TRUNK LOCK RELEASE

Press the trunk release button, located on the lower portion of the driver's door, to open the trunk. The

shift lever must be in Park (P) or Neutral (N) if your vehicle has an automatic transmission. For manual transmission vehicles, the shift lever must be in Neutral with the parking brake set.

ACCESSORY POWER OUTLET(S)

Your vehicle has three accessory power outlets that can be used to connect auxiliary electrical equipment. One is located in the front storage area, one is inside the center console storage bin, and one is on the rear of the center console. See your Owner Manual for more information.

DUAL CLIMATE CONTROL SYSTEM

Your vehicle's climate control system can be operated manually or automatically. With a dual climate



control system, both you and your front seat passenger can choose different temperature settings.

⏻ (Power): Press this button to turn the climate control system on or off.

AUTO (Automatic): Press this button to automatically control the inside temperature, the air delivery mode and the fan speed.

PASS (Passenger Climate Control): Press this button to set a different inside temperature for the passenger.

🌬️ (Defrost): Press this button to direct most of the airflow to the windshield.

↕️ (Fan): Press the up or down arrow to increase or decrease fan speed.

Refer to Owner Manual for further information.

☀️ (Air Conditioning): Press this button to turn the air conditioning system on or off.

🚗 / 🌬️ (Recirculation/Outside Air): Press to select recirculation or outside air modes. An indicator light on the switch will illuminate to show which mode is active.

🌫️ (Rear Window Defogger): Press this button to activate the rear window defogger and the heated outside rearview mirrors.

The defogger and heated mirrors will shut off automatically at slower vehicle speeds or can be turned off by pressing the button again.

↕️ (Mode): Press the up or down ↕️ arrow to change the direction of the airflow as well as to select the defog mode.

^ / v (Temperature Adjustment): Press the up or down arrow button to increase or decrease the temperature setting.

See your Owner Manual for complete operating instructions.

Seats & Mirrors

PASSENGER AIR BAG STATUS INDICATOR

Your vehicle is equipped with a passenger sensing system located in the front passenger seat for the front passenger frontal air bag, and a passenger air bag status indicator located below the clock on the instrument panel.

Note: It is recommended that children not be placed in the front passenger seat, even with the Passenger Sensing System. All children should be secured in a rear seat, including an infant riding in a rear-facing infant seat, a child riding in a forward-facing child seat and an older child riding in a booster seat.

POWER SEAT ADJUSTMENT (if equipped)

The eight-way power seat controls are located on the outboard sides of driver and passenger seats (if equipped).


○ Reviewed with Customer (Please Check Box)

1. Move the front or rear part of the control lever up or down to raise or lower the front or rear of the cushion.
2. Push down or pull up at the center of the control lever to raise or lower the entire seat.
3. Slide the control lever forward or rearward to move the entire seat in that direction.

Power Recliner (if equipped)

The power recliner controls are located to the rear of the adjustment controls.

4. Move the top of the control lever forward to raise the seatback or rearward to recline the seatback.

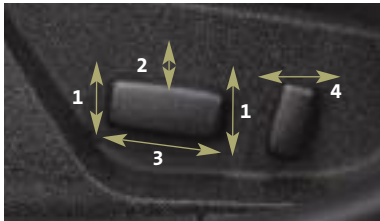

Power Lumbar (if equipped)

The power adjustable lumbar feature is controlled by a two-way switch located on the outboard side of the seat cushion. Press the switch in either direction to adjust the lumbar in the seatback to your most comfortable position.

HEATED AND VENTILATED SEATS (if equipped)

The buttons for the heated and ventilated front seats are located on the climate control panel. Continue to press and release the desired button to cycle through the temperature settings of high, medium and low.

🔥 (Heated Seat and Seatback):

Press this button to control the heated seat and seatback.

🌬️ (Ventilated Seat):

Press this button to control the ventilated seat. The climate control display shows the current setting, or blank if off.

AUTOMATIC DIMMING REARVIEW MIRROR

The automatic dimming feature becomes active every time the vehicle is started.

🔌 (On/Off): Press this button to turn the automatic dimming mirror off or back on while driving. The symbol on the button will illuminate when automatic dimming is active.

POWER OUTSIDE REARVIEW MIRRORS



The controls for both outside rearview mirrors are located on the driver's side armrest.

1. Press the left or right side of the rocker switch to operate the desired outside mirror. The neutral position will turn the power operation capability off.
2. Press the directional arrow on the control button to move the mirror in that direction.

The mirrors can be folded manually inward to prevent damage in car washes or garages. Return the mirrors to their normal positions before driving. The mirrors also are heated to clear fog, snow or ice when the rear defogger is on. Refer to the Comfort/Convenience section of this guide.

MEMORY SEAT, MIRRORS AND STEERING WHEEL

The memory controls are located on the driver's door.

Setting Memory Positions


1. Adjust the driver's seat, both outside mirrors and the steering

wheel if the vehicle has a power tilt wheel.

2. Press and hold button 1 until two beeps are heard to confirm memory settings.
3. Repeat the procedure using button 2 to store memory for a second driver.

To recall memory positions, press either button 1 or 2 with the vehicle in Park (P). Memory positions are also recalled when the Unlock button on the remote keyless entry transmitter is pressed. On vehicles with the Keyless Access System, movement occurs when the driver's door is opened.

Easy Exit Recall

 With the vehicle in Park (P), press the exit button to recall the exit position. A beep will sound. The driver's seat moves back, and if the vehicle has the power tilt wheel and telescopic steering feature, it moves up and forward.

If this feature is on in the DIC, automatic movement occurs when the key is removed from the ignition. On vehicles with the Keyless Access System, movement occurs when the ignition is turned OFF and the driver's door is opened.



PARK TILT MIRRORS

When activated through the Driver Information Center (DIC), the mirrors will tilt to a pre-selected position when the vehicle is shifted into Reverse (R) to assist the driver when parallel parking. If further adjustment is needed, the standard power controls can be used. Five seconds after shifting out of Reverse (R), the mirror will return to its original position. The park tilt feature can be enabled/disabled through the DIC.

Refer to Owner Manual for further information.

 
o Reviewed with Customer (Please Check Box)

Audio/Personalization/Communication



AUDIO SYSTEMS

While most of the features on your radio will look familiar, following are some that may be new.

VOL  (**Volume/Power**): Press this knob to turn the system on or off. Turn the knob to adjust the volume.

TUNE/TONE: Turn this knob to select radio stations. Press the knob to adjust the speaker tone and balance.

FM/AM: Press to switch between FM and AM frequency.

XM™ (if equipped): Select to access XM™ satellite radio.

CD: Select to play a CD instead of the radio.

HDD: Select to access the Hard Drive Device feature.

AUX: Select to automatically search for a device connected to the auxiliary input jack.

Optional Hard Drive Device (HDD) and Navigation Radio Features (Standard on CTS-V)

REC (Record): Press this button to store a song from a media source to the HDD.

CONFIG: Press this button to display the radio setup menu.

MENU/SELECT: Turn this knob to scroll through a list of available radio stations and functions. Press the knob to select a station or menu option.

DEL (Delete): Press this button to erase selections from the HDD menu/memory.

INFO (Information): Press this button to display additional text information.

FAV (Favorites): Press this button to go through up to six pages of any combination (AM, FM or XM, if equipped) of preset radio stations. On each page, up to six stations are available by using the six pushbuttons below the radio display or on the Navigation touch screen.

◀ SEEK ▶: While listening to AM, FM, or XM, press the left or right arrow button to go to the previous or next radio station. When a CD or HDD selection is playing, press the left or right arrows to go to the start of the current track or MP3 file or the next track or MP3 file.

▲ **(Eject):** Press this button once to eject the currently playing CD or DVD (if equipped); or, if equipped with the multiple-disc CD player, press and hold this button to eject all CDs. If a CD is not removed after several seconds, it will be pulled back into the player automatically.

▶/|| **(Play/Pause):** Press this button to play a media source or to pause a currently playing media source. Use this button to initiate time shift mode which allows you to play back AM, FM or XM content for the previous 60 minutes. This feature will continue to work even if the ignition is turned off.

▷▷ **FWD/◀◀ REV (Forward/ Reverse):** Press and hold the right or left arrow button to advance or reverse through a CD or MP3 track. These buttons are also used to move through time shift audio.

HARD DRIVE DEVICE (HDD) (if equipped)

Radios with a Hard Drive Device

Refer to Owner Manual for further information.

(HDD) can store songs from a CD or media storage device to your audio system. A USB port is located in the center console storage bin, between the accessory power outlet and the auxiliary input jack.

To access the HDD:

1. Press the Menu/Select knob to display the HDD menu.
2. Turn the Menu/Select knob to highlight an option from the HDD menu.
3. Press the Menu/Select knob to select that option.

Press the REC button to store a song or songs for the selected source.

See your Owner Manual for more detailed information about this feature.

Setting Favorite Stations

To store favorite stations:

1. Tune to the desired station.
2. Press the FAV button to display the page where the station is to be stored.
3. Press and hold one of the six

pushbuttons or Navigation touch screen until a beep sounds.

4. Repeat the steps for each pushbutton on each page. You can select up to six pages for which there are six favorites per page.

To set the number of favorite station pages:

1. Press the CONFIG button to display the radio setup menu.
2. Press the pushbutton located below the FAV label.
3. Select the number of preset pages you want.

Note: Choosing to engage in extended searching for specific audio stations or songs by using buttons and knobs — or to give extended attention to entertainment tasks — can lead you to look away from the road frequently or longer than usual. Looking away from the road for prolonged periods may cause you to miss seeing things on the road that you need to see. Be sure to keep your eyes on the road and mind on the drive — and avoid engaging in extended searching for specific items while driving.

○ Reviewed with Customer (Please Check Box)

XM™ SATELLITE RADIO

XM Satellite Radio offers more than 170 channels of digital-quality sound that goes wherever you go – coast to coast. After a free three-month trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada. For more information, visit XM online at www.XMradio.com or call 1-800-929-2100.

SIX-DISC CD CHANGER CONTROLS**Loading One Disc:**

With the ignition on or off, do the following:

1. Press and release the load button and wait for the message to insert the disc.
2. Load the disc. Insert a disc partway into the slot, label side up. The player will pull the disc in.

Loading Multiple Discs:

With the ignition on or off, do the following:

1. Press and hold the load button for five seconds. A beep will be heard and Load All Discs will appear on the display.
2. Follow the displayed instructions and load a disc partway into the slot, label side up. The player will pull it in.
3. To cancel loading CDs, press the load button again. If the radio is on, the last disc loaded will begin to play automatically.

Note: If you add any label to a CD, insert more than one CD into the slot at a time, or attempt to play scratched or damaged CDs, you could damage the CD player. When using the CD player, use only CDs in good condition without any label, load one CD at a time, and keep the CD player and the loading slot free of foreign materials, liquids and debris.

ONSTAR® (if equipped)

You have one year of OnStar service from the date you purchased your new vehicle with one of two service plans, Safe & Sound, or the up-level Directions & Connections Plan. Push your OnStar button to ask an Advisor for details about the service plan you have or to upgrade you plan. Your vehicle has a wide variety of capabilities, from Remote Door Unlock to Automatic Airbag Notification to Hands-Free Calling and most vehicles can get driving directions using Turn-by-Turn Navigation.

Visit onstar.com. For more information about OnStar, refer to the OnStar Owner's Guide, call 1-888-466-7827, or push the OnStar button.

 
BLUETOOTH® SYSTEM


The in-vehicle Bluetooth system allows users with a Bluetooth-enabled cell phone to make and receive Hands-Free phone calls utilizing the vehicle's audio system, microphone and controls. The Bluetooth-enabled cell phone must be paired to the in-vehicle Bluetooth system before it can be used in the vehicle.

Bluetooth Controls



The following Bluetooth controls are located on the steering wheel:

 **(Push to Talk)** — Press and hold for two seconds to answer incoming calls, confirm system information, and to start voice recognition.

 **(Phone on Hook)** — Press to end or reject a call, and to cancel an operation.

Refer to Owner Manual for further information.

The system operates using voice recognition commands. To help increase accuracy, the system will play a short tone after prompting you for information or a command. Do not speak until after the tone. Not all phones will support all functions. For more information, visit www.cadillac.com/bluetooth.

For instructions on how to use the system, see Section 3 of your Owner Manual.

Powertrain & Maintenance

ENGINE Fuel

Your CTS is equipped with an 18-gallon (68.1 L) fuel tank. When your vehicle gets low on fuel, the Fuel Level Low message displays in the Driver Information Center.

The fuel door is located on the passenger side of the vehicle and can be opened by pressing the rear edge of the door with your fingers.

Coolant Heater (if equipped)

The engine coolant heater can make starting the engine easier at temperatures below 0°F (-18°C).

For best results, the coolant heater should be plugged in at least four hours before starting your vehicle.

Note: The grade of gasoline you use can affect the performance of your vehicle and may even cause damage. Please refer to your Owner Manual for complete information regarding suggested octane ratings for optimum performance.

TRANSMISSION

Automatic Overdrive

Automatic Overdrive is best used for normal driving. To activate passing gear when going less than 35 mph (55 km/h), push the accelerator about halfway down; when doing more than 35 mph (55 km/h), push the accelerator all the way down. For further information regarding gear selection for various driving conditions, refer to your Owner Manual.

o Reviewed with Customer (Please Check Box)

Driver Shift Control (automatic transmission only)

The Driver Shift Control (DSC) mode allows you to change gears similar to a manual transmission. To use the DSC mode:

1. Slide the gearshift lever from Drive (D) to the right to Manual Mode (M).
2. Press the gearshift lever forward to upshift or rearward to downshift. Activation of the DSC mode is indicated in the DIC. The display above the (M) in the cluster will change to a number indicating the requested gear range.

When in DSC mode, if you do not move the gearshift lever forward or rearward to shift, the transmission will be in sport mode and will still shift automatically.

The transmission will only allow shifting into gears appropriate for the



vehicle speed and engine rpm. The transmission will not automatically shift to the next higher gear if the rpm is too high.

TRACTION & STABILITY

Traction Control System

The traction control system is enabled every time you start your vehicle. When one or more of the drive wheels begin to spin from traction loss, the Traction Control System will apply braking to the spinning wheel(s) and may reduce engine power until traction is regained.

If your vehicle becomes stuck, and rocking the vehicle is required, the system should be turned off.

Press the button located on the instrument panel to turn the system off or back on.

StabiliTrak® –

Stability Control System

StabiliTrak® is an advanced computer-controlled system that assists with directional control of

the vehicle during sudden maneuvers or low-traction situations. It is normal to hear the system working, and the system will automatically disengage cruise control when activated.

Magnetic Ride Control™ (CTS-V only)

The ride of your vehicle is automatically adjusted through a computer that monitors the suspension system. Sensors send input to the computer which then determines the proper system response. Please see your Owner Manual for a complete description of V-Series MR suspension modes.

Competitive Driving Mode (CTS-V only)

By pressing the TC button, you can access various V-Series competitive driving modes that will greatly enhance the performance capability of your V-Series in demanding driving situations. Please see your Owner Manual for a complete description of the various competitive driving modes.

Owner Privileges™

To make your ownership experience as satisfying and rewarding as possible, we are proud to provide you with Cadillac's exceptional Owner Privileges™, designed to accommodate you anytime and anywhere.

ROADSIDE SERVICE **1-800-882-1112**

Roadside Service provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services:

- Towing Service
- Battery Jump-Starting
- Lockout Assistance
- Fuel Delivery
- Flat Tire Assistance (covers change only)

Roadside Assistance and OnStar® (if equipped)

Push the OnStar button, the vehicle will send your GPS location to the OnStar Advisor who will speak to you, assess your problem, contact

Refer to Owner Manual for further information.

Roadside Assistance and relay your exact location so you get the help you need.

Trip Interruption: If your trip is interrupted due to a component failure covered under warranty, incidental expenses may be reimbursed, including hotel, meals and rental car.

Courtesy Transportation: may also be provided for warranted repairs, including shuttle service for same-day repairs and loaner transportation for overnight repair. Roadside Service is also available to Cadillac customers beyond the warranty period for a charge.

CUSTOMER ASSISTANCE **1-800-458-8006**

In Canada, call 1-888-446-2000. Should you need to ask a question, make a comment, or request additional information, the exclusive Cadillac Customer Assistance Center is staffed around the clock with professionals to serve you. When you call Cadillac

Roadside Service or Customer Assistance, when possible, please provide the phone advisor with:

- Your telephone number
- Your location
- Your Cadillac's location
- A description of the problem
- Vehicle Identification Number
- Year and model of your Cadillac
- Delivery date
- Current mileage

CADILLAC ONLINE

For more information about your Cadillac, including access to the Cadillac Owner Center at My GMLink, visit www.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice.

CTS is a registered trademark of Cadillac Motor Car Division and General Motors Corporation. Copyright 2008 by Cadillac Motor Car Division. All rights reserved.

o Reviewed with Customer (Please Check Box)

Cadillac



25795637A